IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. **TO AVOID BATTERY LEAKAGE**
   a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
   b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
   c. Remove exhausted or dead batteries from the product.
   d. Remove batteries if product is not to be played with for a long time.
   e. Do not short-circuit the supply terminals.
   f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

Product and colors may vary.

YouTube and the YouTube logo are trademarks of Google Inc.
© 2013 Larami Ltd.
®* and/or TM* & © 2013 Hasbro.
All Rights Reserved.
TM & ® denote U.S. Trademarks.

A4841 PN 7393960000

Hey NERF Nation!
Join us online and keep up with the latest and greatest NERF news!
Find us on Facebook NERF.COM WATCH ON YouTube
Ask a parent before going online.

Questions? Call 1-800-327-8264

NERF Super Soaker

⚠ CAUTION:

Do not aim at eyes or face.
TO AVOID INJURY: Use only clean tap water.

Do not submerge in water.

AGES 6+

HYDROSTORM

x6 ALKALINE BATTERIES REQUIRED
1.5VAA NOT INCLUDED

TO INSERT BATTERIES

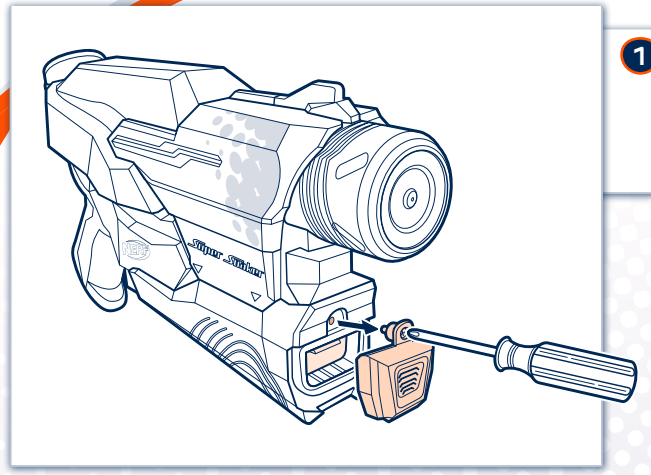

1. Using a Phillips/cross head screwdriver (not included), loosen the screw in battery compartment cover.

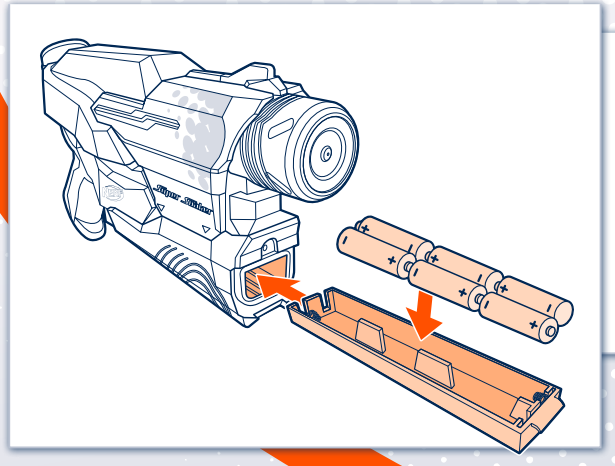

2. Remove battery case and insert batteries as shown.
3. Battery case fits in only one direction. Do not force it.
4. Replace cover and tighten screw.

TO PLAY

1

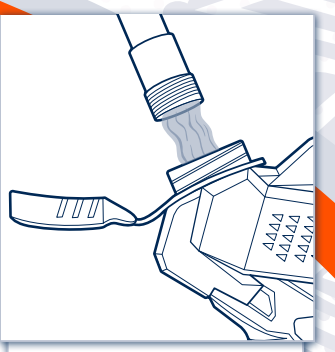

2. Fill tank with clean, clear water.

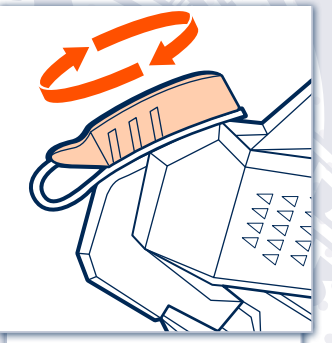

3. Replace cap. Make sure you tighten it completely.

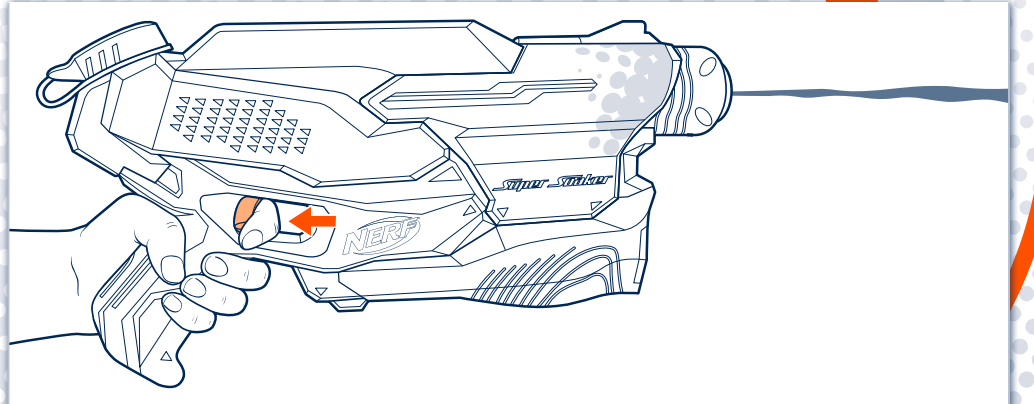

4. Pull trigger to fire.